



## Whole Unit Parts List

REF. NO.	DESCRIPTION	PART NUMBERS FOR MODELS					QTY.
		WL6006	WL6007	WL6008	WL6011	WL6045	
1	† Pump/motor	WL330002AJ	WL330002AJ	WL330002AJ	WL330002AJ	WL330002AJ	1
2	Compression ferrule	ST032900AV	ST032900AV	ST032900AV	ST032900AV	ST032900AV	2
3	Compression nut	ST033001AV	ST033001AV	ST033001AV	ST033001AV	ST033001AV	2
4	Exhaust tube	WL001901AP	WL001901AP	WL001901AP	WL001901AP	WL001901AP	1
5	Hex stop nut	AL014000AV	AL014000AV	AL014000AV	AL014000AV	AL014000AV	2
6	Check valve	CV221500AJ	CV221500AJ	CV221500AJ	CV221500AJ	CV221500AJ	1
7	Handle	HL001800BH	HL001800BH	HL001800BH	HL001800BH	HL001800BH	1
8	1/4-20 Handle screw	ST012200AV	ST012200AV	ST012200AV	ST012200AV	ST012200AV	2
9	Drain cock	D-1401	D-1401	D-1401	D-1401	D-1401	1
10	Foot	ST041600AV	ST041600AV	ST041600AV	ST041600AV	ST041600AV	2
11	Air receiver	AR025601JY	AR025701JY	AR025801JY	AR025801JY	AR026201JY	1
12	Wheel	WA002500AV	WA002500AV	WA002500AV	WA002500AV	WA002500AV	2
13	Axle, bolt, hex head	ST033400AV	ST033400AV	ST033400AV	ST033400AV	ST033400AV	2
14	Lock nut, hex head	ST033500AV	ST033500AV	ST033500AV	ST033500AV	ST033500AV	2
15	Shoulder bolt	ST158000AV	ST158000AV	ST158000AV	ST158000AV	ST158000AV	3
16	Power cord and plug	EC002104AV	EC002104AV	EC002105AV	EC002105AV	EC002104AV	1
17	Unloader tube	ST079709AV	ST079709AV	ST079709AV	ST079709AV	ST079709AV	1
18	Manifold shroud	RE009403AV	RE009403AV	RE009403AV	RE009403AV	RE009403AV	1
19	Adjusting knob	RE009701AV	RE009701AV	RE009701AV	RE009701AV	RE009701AV	1
20	■ Regulator top	RE009501AG	RE009501AG	RE009501AG	RE009501AG	RE009501AG	1
21	■ O-ring	ST070180AV	ST070180AV	ST070180AV	ST070180AV	ST070180AV	1
22	■ Spring plate	RE009800AV	RE009800AV	RE009800AV	RE009800AV	RE009800AV	1
23	■ Spring	ST114500AV	ST114500AV	ST114500AV	ST114500AV	ST114500AV	1
24	■ Piston	RE009900AV	RE009900AV	RE009900AV	RE009900AV	RE009900AV	1
25	■ O-ring	ST070160AV	ST070160AV	ST070160AV	ST070160AV	ST070160AV	1
26	Guage	GA016101AV	GA016101AV	GA016101AV	GA016101AV	GA016101AV	2
27	■ O-ring	ST070161AV	ST070161AV	ST070161AV	ST070161AV	ST070161AV	1
28	■ Valve seat	RE010000AV	RE010000AV	RE010000AV	RE010000AV	RE010000AV	1
29	■ Valve stem	RE010100AV	RE010100AV	RE010100AV	RE010100AV	RE010100AV	1
30	■ Spring	RE010300AV	RE010300AV	RE010300AV	RE010300AV	RE010300AV	1
31	■ O-ring	ST070162AV	ST070162AV	ST070162AV	ST070162AV	ST070162AV	1
32	■ Screw (1 in regulator assy)	ST073224AV	ST073224AV	ST073224AV	ST073224AV	ST073224AV	4
	Safety valve	V-215100AV	V-215100AV	V-215100AV	V-215100AV	V-215100AV	1
	Hose connector	HF002400AV	HF002400AV	HF002400AV	HF002400AV	HF002400AV	1
	■ Manifold body	RE009301AG	RE009301AG	RE009301AG	RE009301AG	RE009301AG	1
	Pipe plug	ST022500AV	ST022500AV	ST022500AV	ST022500AV	ST022500AV	2
37	1/4-18 NPT nipple	HF002401AV	HF002401AV	HF002401AV	HF002401AV	HF002401AV	1
38	O-ring	ST008600AV	ST008600AV	ST008600AV	ST008600AV	ST008600AV	1
39	Strain relief	ST081901AV	ST081901AV	ST124100AV	ST124100AV	ST081901AV	1
40	Strain relief screw	ST073233AV	ST073233AV	ST073233AV	ST073233AV	ST073233AV	1
41	Pressure switch	CW208102AV	CW208102AV	CW208102AV	CW208102AV	CW208102AV	1
42	Shroud	WL001501AV	WL001501AV	WL001501AV	WL001501AV	WL001501AV	1
43	Rear cover	WL002202AV	WL002202AV	WL002202AV	WL002202AV	WL002202AV	1
44	Plascrew M3	ST158400AV	ST158400AV	ST158400AV	ST158400AV	ST158400AV	1
45	Shroud tapping screw	ST129302AV	ST129302AV	ST129302AV	ST129302AV	ST129302AV	
46	Shroud tapping screw	ST129301AV	ST129301AV	ST129301AV	ST129301AV	ST129301AV	
47	Isolation mount	WL003202AV	WL003202AV	WL003202AV	WL003202AV	WL003202AV	
48	Isolation mount	WL003201AV	WL003201AV	WL003201AV	WL003201AV	WL003201AV	
■	Regulator/manifold	CV220100AJ	CV220100AJ	CV220100AJ	CV220100AJ	CV220100AJ	

† Items 42-46 are not included with the pump/motor assembly