


(9000 693 715 Rev A)


Plastic Toe Panel Installation Instructions

Note: Only follow these instructions if your dishwasher came with a plastic toe panel as well as a metal toe panel.


1. Orient the plastic toe panel on the floor as shown below with label side up. Insert the plastic toe panel by tilting and lifting upward and backward. The lip on the front of the toe panel should be flush with the bottom of the door. The side flaps of the toe panel should fit on the outside of the sides of the dishwasher door.

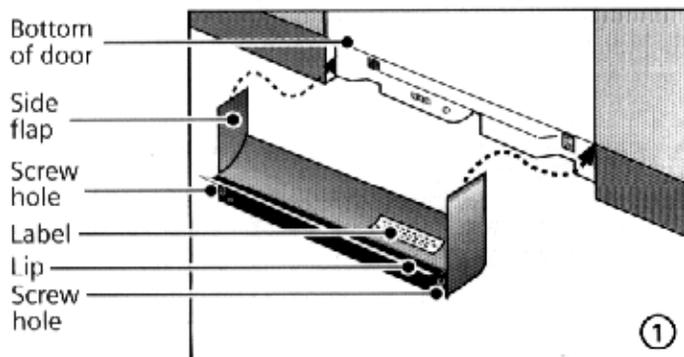


2. Check for interference between door, toe panel and cabinets. If the door does not open smoothly, the toe panel is not in the correct position. The toe panel side flaps should be on the OUTSIDE of the door edges and deco strip on both sides as shown below so the door can move freely without rubbing the toe panel. Make adjustments as needed.

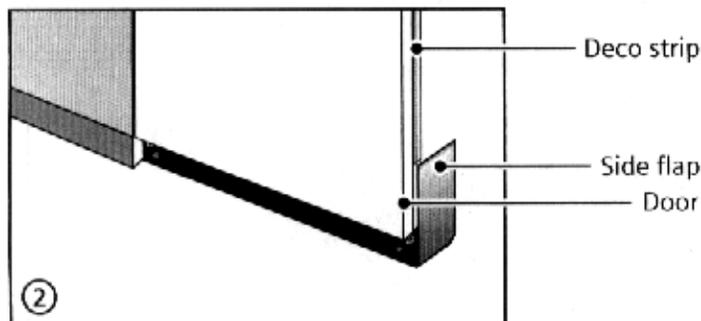

3. While holding the plastic toe panel in position, insert the screws (part E) in each screw hole. Push screws back and be sure they are lined up with appropriate hole as shown below. Apply firm pressure with screwdriver to tap screws.

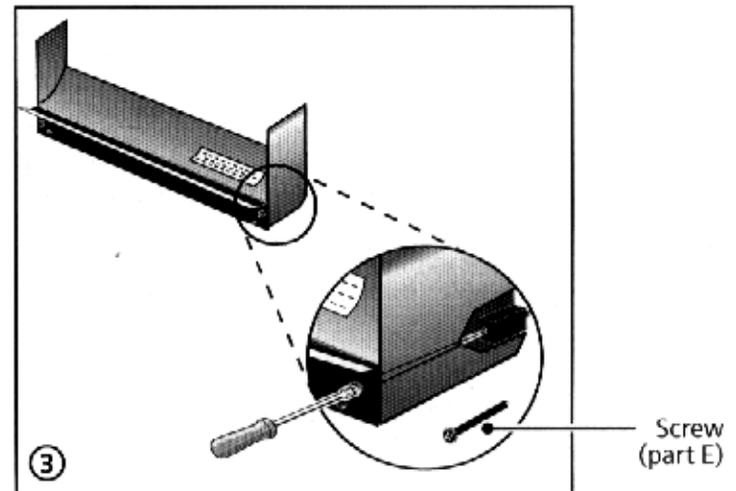

4. Place cotton strip (part M) on floor beneath installed plastic toe panel as shown below.

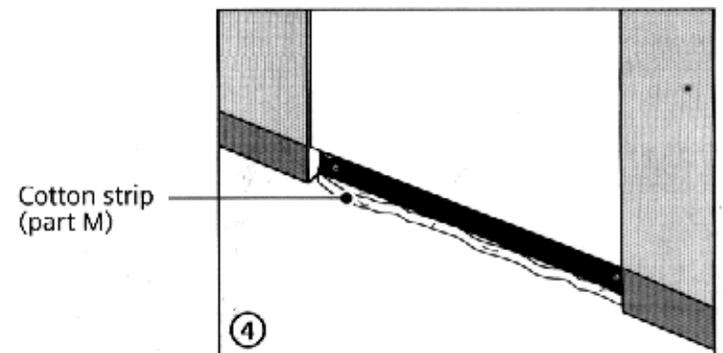

5. Add metal toe panel to outside of cotton and installed plastic toe panel. While holding in place, use screws (part P) to attach the metal toe panel, ensuring the bottom of the panel is flush with the floor and cotton strip cannot be seen. Success! Your installation is now complete!

